

Supplier	JTAG debuggers / Trace Emulators	Supported Devices											Comments
		LPC17xx	LPC21xx	LPC22xx	LPC23xx	LPC24xx	LPC28xx	LPC29xx	LH754xx	LH795xx	LH7A4xx	LPC3xxx	
Keil / ARM	ULINK2	●	●	●	●	●	●	●	●	●	●	●	Trace via serial wire viewer for M3
	ULINK-ME	●	●	●	●	●	●	●	●	●	●	●	Trace via serial wire viewer for M3
	ULINK-PRO	●	●	●	●	●	●	●	●	●	●	●	Supports SWV and 4 -bit ETM trace
Lauterbach	TRACE32-ICD		●	●	●	●	●	●	●	●	●	●	JTAG debugger
	TRACE32-PowerTrace		●	●	●	●	●	●					JTAG w/Trace
	TRACE32-ETB											●	JTAG w/ETB Trace
Oasis	Odyssey	●	●	●	●	●	●	●	●	●	●	●	Ethernet JTAG Debugger
Olimex	ARM-JTAG	●	●	●	●	●	●	●	●	●	●	●	Parallel port JTAG dongle interface
Phyton	JEM-ARM		●	●	●	●	●						
pls	UAD2compact	●	●	●	●	●	●	●	●	●	●	●	JTAG debugger
	UAD2, UAD2+	●	●	●	●	●	●	●	●	●	●	●	JTAG debuggers
	UDE ETM/ETB Trace		●	●	●	●						●	ETM / ETB Trace debugger
Raisonance	RLink-Std	●	●			●							Debug up to 32 KB in RAM or Flash
	RLink-Pro	●	●			●							Unlimited debugging, programming
Rowley	CrossConnect for ARM	●	●	●	●	●	●	●	●	●	●	●	
SEGGER	J-Link ARM	●	●	●	●	●	●	●	●	●	●	●	
	J-Link ARM Pro	●	●	●	●	●	●	●	●	●	●	●	
	J-Trace	●	●	●	●	●	●	●	●	●	●	●	J-Trace for ARM, J-Trace for Cortex M3
Signum	JTAGjet	●	●	●	●	●	●	●	●	●	●	●	Uses Hi-Speed USB interface
	JTAGjet-Trace	●	●	●	●	●	●	●	●	●	●	●	Uses Hi-Speed USB interface
uCdragon	ARMstep-U / -P		●	●	●	●	●	●	●	●	●	●	
Yokogawa	'advice' series	●	●	●	●	●	●	●	●	●	●	●	works with microVIEW-PLUS debugger
ZLG	EasyJTAG-H	●	●	●	●	●	●	●	●	●	●	●	
	Family	¹⁾	LPC2000						LH7 / LH7A			²⁾	¹⁾ LPC1000 ²⁾ LPC3000
	Core	M3	ARM7TDMI				³⁾	⁴⁾	⁵⁾	⁶⁾	⁷⁾	³⁾ ARM968 ⁴⁾ ARM7TDMI ⁵⁾ ARM720T ⁶⁾ ARM922T ⁷⁾ ARM926EJ	